



DENSO™ PROFILING MASTIC

INSTRUCTIONS FOR USE

COVERING ORIGINAL AND HT VERSIONS

USE

For profiling around irregular shaped pipe fittings particularly where deep fillings are required. It is used with primer prior to overwrapping with DENSO™, DENSOPOL™ or DENSOCLAD TAPES™ for the long term corrosion protection of buried pipe fittings.

SURFACE PREPARATION

Surfaces must be clean, dry and dust-free. Remove all loose rust, scale and flaking coatings by scraping, wire brushing or blast cleaning.

PRIMING

Apply appropriate primer for tape (e.g. DENSO PASTE™ or DENSO™ HI-TACK PRIMER for DENSO TAPE™ or DENSO PRIMER D™ for DENSOPOL™ or DENSOCLAD™ cold applied laminate tapes). Apply DENSO PASTE™ by gloved hand, DENSO™ HI-TACK PRIMER or DENSO PRIMER D™ by brush in a thin layer over the entire surface including threads, crevices and pitted areas.


APPLICATION

Press DENSO™ PROFILING MASTIC into cavities, angles and around bolt heads to form a profile suitable for wrapping with tape without forming bridges or voids.

OVERWRAPPING

DENSO™ PROFILING MASTIC must be wrapped with an anti-corrosion tape to complete protection. See 'Instructions for Use' or the particular tape.

Diagram of the correct application procedure.

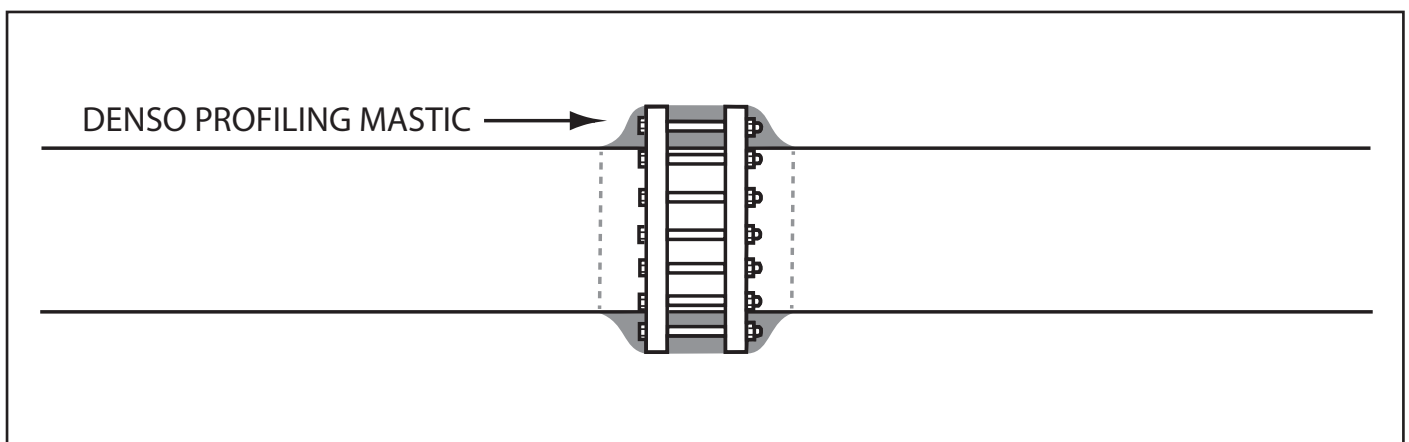



DENSO™ PROFILING MASTIC

INSTRUCTIONS FOR USE

COVERING ORIGINAL AND HT VERSIONS

STORAGE

Store correct way up in original packaging.
Store in a cool dry place away from heat and open flames.

TRANSPORT

No special precautions necessary.

HANDLING

- Grease resistant gloves are advised to reduce skin contact.
- Avoid contact with arms and face etc.
- Wash thoroughly with soap and water after use and before work breaks to remove compound from the skin.
- Careful attention should be given to personal hygiene.
- Change and clean soiled clothing.

ACTION IN CASE OF..

FIRE: Extinguish with dry powder, carbon dioxide or chemical foam. Use air breathing equipment in case of large fires in confined spaces.

SKIN CONTACT: Wash with warm water and mild soap.

EYE CONTACT: Irrigate eyes thoroughly with clean water.

SWALLOWING: Obtain medical advice if necessary.

DISPOSAL

Please minimise or avoid waste wherever possible. Please do not discard waste material, including packaging, in the surrounding environment. Follow all relevant legislation for disposal.

IMPORTANT:

Winn & Coales (Denso) Ltd pursue a policy to develop and continually improve all of our products and therefore information given in this data sheet is intended as a general guide and does not constitute a warranty, specification or risk assessment. These guidelines may not cover all circumstances; however, our sales personnel are committed to assisting the user in establishing the suitability of the product for its intended purpose and additional specific information, including Safety Data Sheets, is available on request. We recommend that installation is carried out with due regard to Health and Safety and in accordance with relevant local statutes and regulations. Any conflict between these guidelines and the specific project specifications must be resolved by the user before work commences. All rights reserved.



WINN & COALES (DENSO) LTD
Denso House, Chapel Road, London, United Kingdom
TEL: +44 (0) 208 670 7511
EMAIL: mail@denso.net • WEB: www.denso.net

A MEMBER OF WINN & COALES INTERNATIONAL



PUB No. 324.01.2000