



STEELCOAT 100/400™ SYSTEM


UK SPECIFICATION

(For 'Steelcoat 100/400™ System IFU – Export Specification', see PUB No. 721.12.2025)

A HAND APPLIED SURFACE TOLERANT TAPE WRAP SYSTEM FOR NORMAL AMBIENT TEMPERATURES, DESIGNED TO PROVIDE A LONG-TERM SERVICE LIFE IN SEVERE CORROSIVE ENVIRONMENTS WHERE ABRASIVE BLAST CLEANING IS NOT PRACTICAL.

INSTRUCTIONS FOR USE

For Above Ground Application to (UV) Exposed Pipes, Couplings, Flanges and Valves

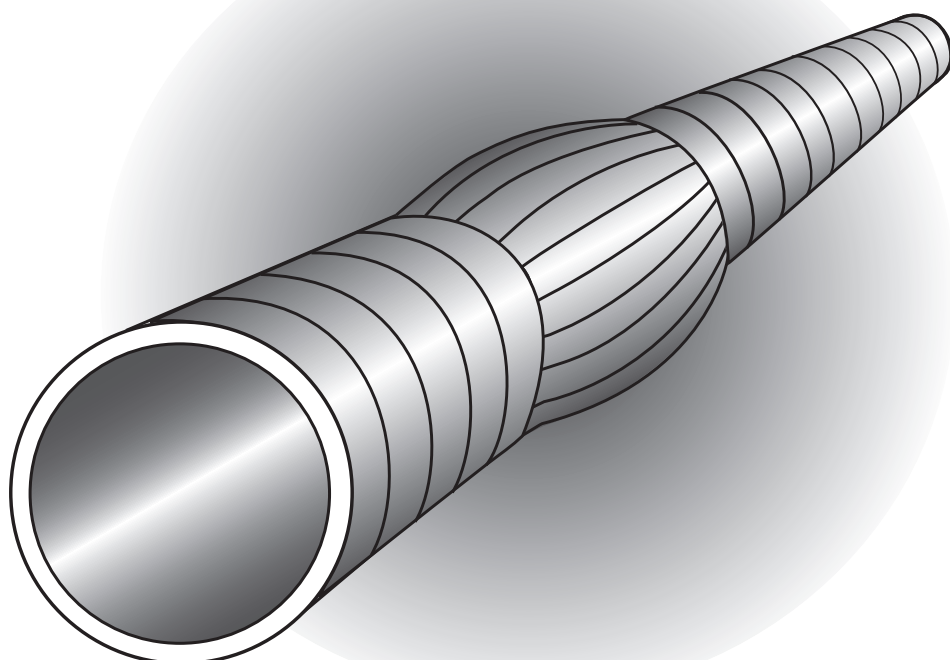

COMPONENTS

- DENSO™ HI-TACK PRIMER
- DENSO™ PROFILING MASTIC - for joints
- DENSO™ HI-TACK TAPE
- DENSO™ ULTRASEAL TAPE or DENSO™ ULTRASEAL RT
- DENSO™ ACRYLIC TOPCOAT

APPLICATION PROCEDURE

1. SURFACE PREPARATION

Surfaces must be clean and dry. Remove all loose rust, scale and flaking coatings by scraping, wire brushing or blast cleaning if possible.

2. PRIMING - DENSO HI-TACK PRIMER

For small diameter pipes and fittings (e.g. service pipes) apply Denso Hi-Tack Primer by gloved hand in a thin layer over the entire surface including threads, crevices and pitted areas. For larger areas, Denso Priming Solution may be used instead of Denso Paste. For damp or wet surfaces, Denso Paste S105 may be used.

3. PROFILING APPLICATION TO COUPLINGS, FLANGES AND VALVES - DENSO PROFILING MASTIC

Apply sufficient Denso Profiling Mastic to ensure the Denso Hi-Tack Tape can be applied afterwards to all contours without forming voids or air gaps - See figures 1&2.

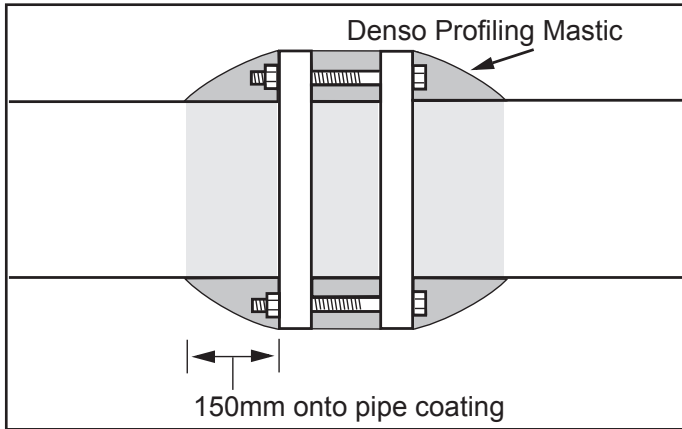


Fig 1.

Use Denso Profiling Mastic to build up and smooth the contours of the coupling or flange prior to wrapping with tape.

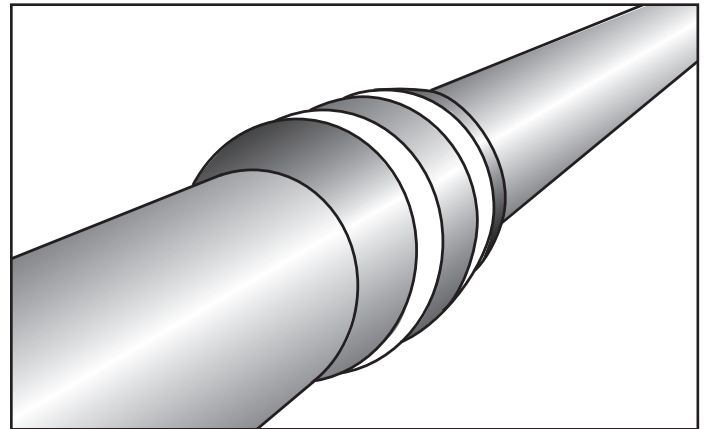


Fig 2.

The profiled coupling or flange ready for the application of Denso Hi-Tack Tape.

4. TAPE APPLICATION TO COUPLINGS, FLANGES AND VALVES - DENSO HI-TACK TAPE

Prepare pre-cut strips of Denso Hi-Tack Tape to apply in a longitudinal weatherboard fashion, one side at a time, starting at the bottom and working towards the crown.

Commence 150mm on one side of the coupling or flange and terminate approximately 150mm past the coupling or flange on the other side.

150mm is sufficient for this kind of application.

Ensure each strip overlaps the adjacent strip by 55% (see Figs. 3 & 4).

Tie in the edges of the strips on each side of the coupling or flange by applying circumferentially a couple of turns of Denso Hi-Tack Tape using a 55% overlap (see Fig 5).

This wrapping process should then be repeated again in the same way using Denso Ultraseal Tape (or Denso Ultraseal RT) prior to the application of the Denso Acrylic Topcoat.

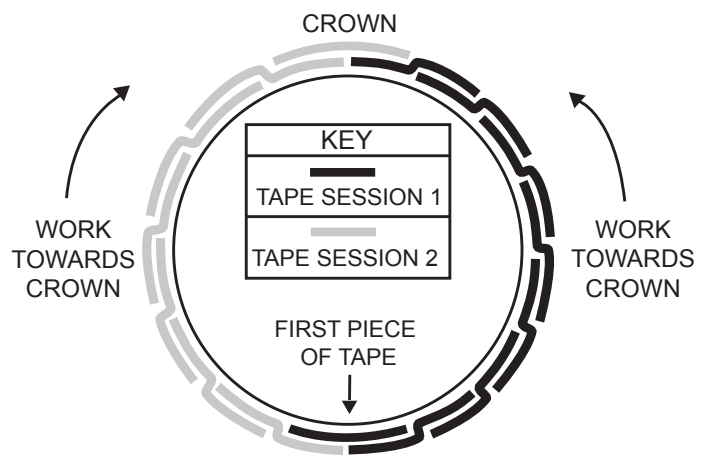


Fig 3.

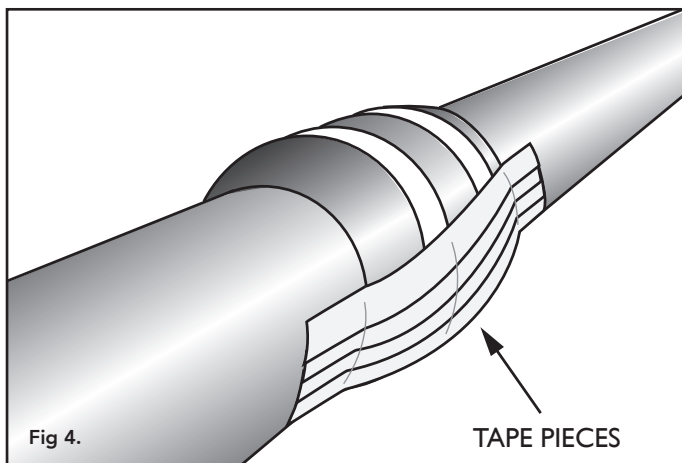


Fig 4.

TAPE PIECES

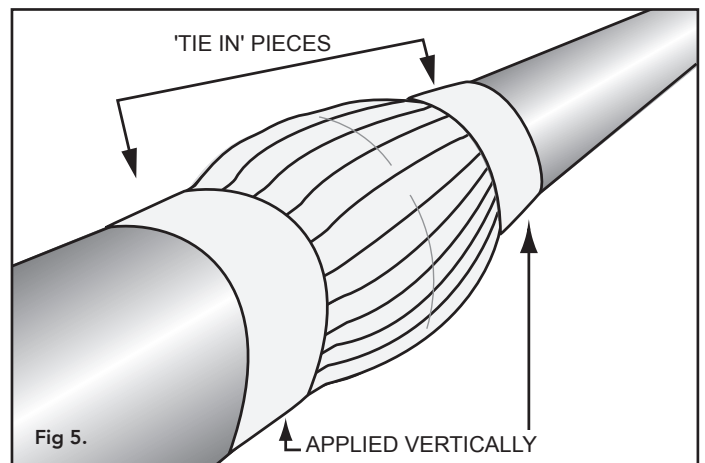


Fig 5.


'TIE IN' PIECES
APPLIED VERTICALLY

5. TAPE APPLICATION TO PIPEWORK - DENSO HI-TACK TAPE

METHOD FOR WRAPPING PIPEWORK WITH DENSO HI-TACK TAPE

Apply the Denso Hi-Tack Tape spirally using a 55% overlap on each turn and smooth down thoroughly during application. Apply sufficient tension to ensure the tape conforms to the pipe surface.

Start a new roll by overlapping the end of the applied roll by the same length as the tape width. Example, for a 100mm width tape the new roll should overlap the previously applied roll by 100mm.

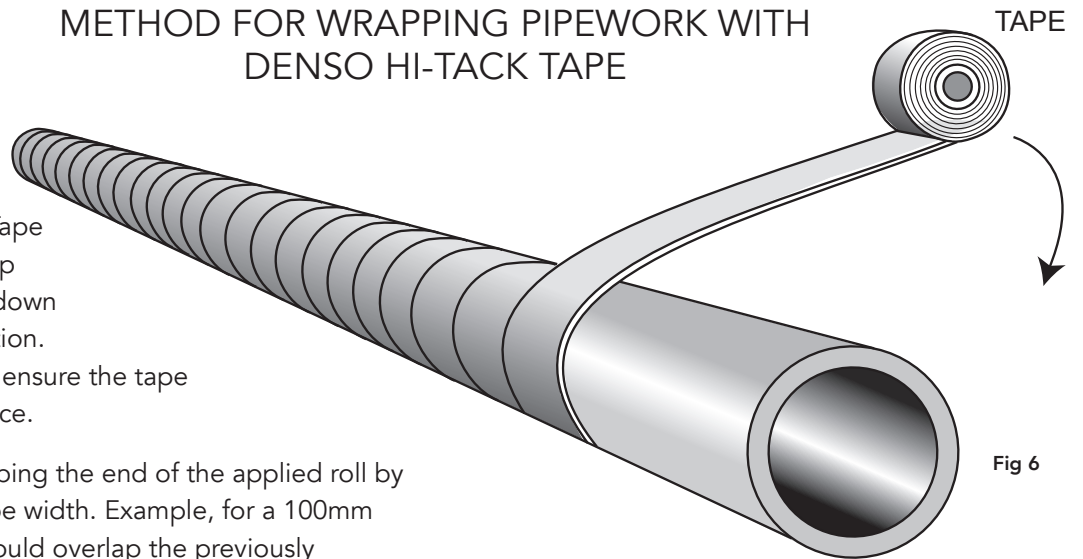

6. TAPE APPLICATION TO PIPEWORK - DENSO ULTRASEAL TAPE or DENSO ULTRASEAL RT

Peel back about 0.5m of interleaving and apply the adhesive side of the tape firmly to the pipe (see Fig 7).

Unroll the tape about 0.5m, peel back the interleaving and wrap the tape spirally ensuring correct alignment.

Apply sufficient tension to ensure the tape conforms to the pipe surface.

Overlap each turn by a minimum of 55% (see Fig 8).

Start a new roll by overlapping the end of the applied roll by the same length as the tape width (see Fig 9).

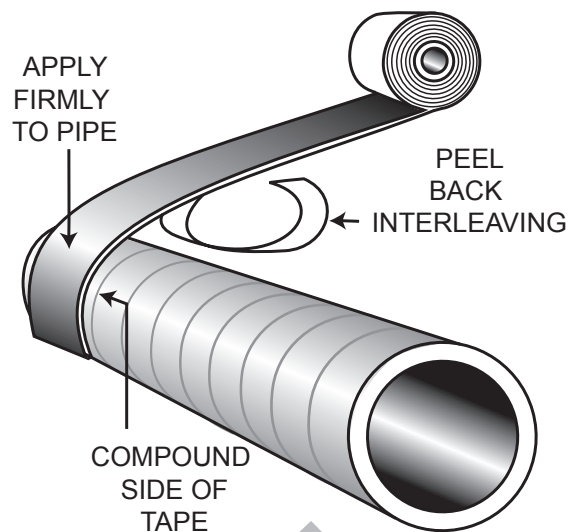


Fig 7. Starting the first roll of tape.

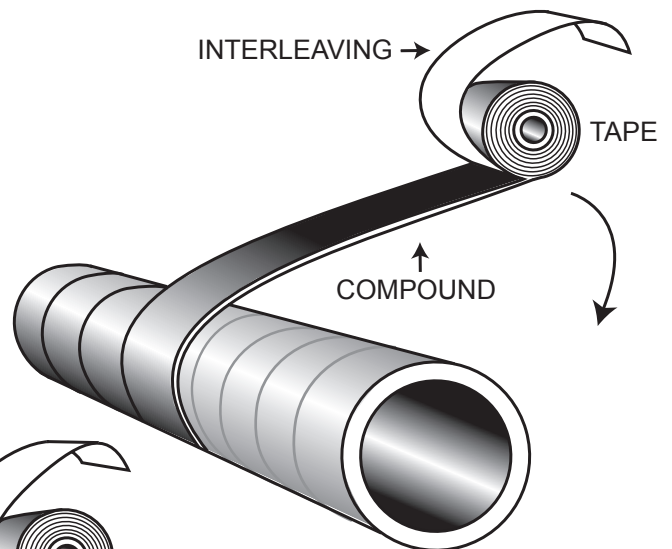


Fig 8. The correct application procedure for wrapping tape

OVERLAP END OF TAPE BY THE SAME LENGTH AS THE TAPE WIDTH

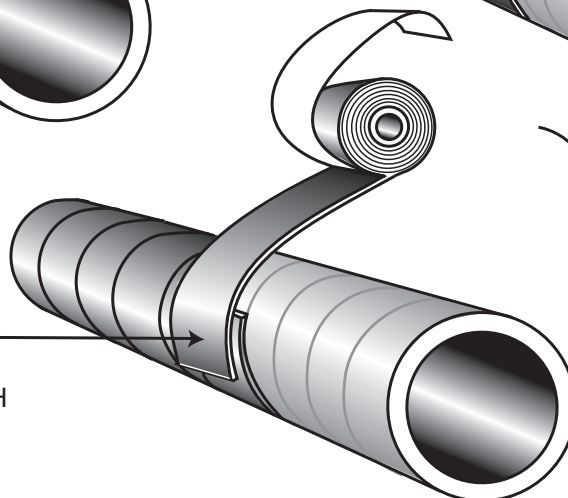


Fig 9. Starting a new roll of tape.

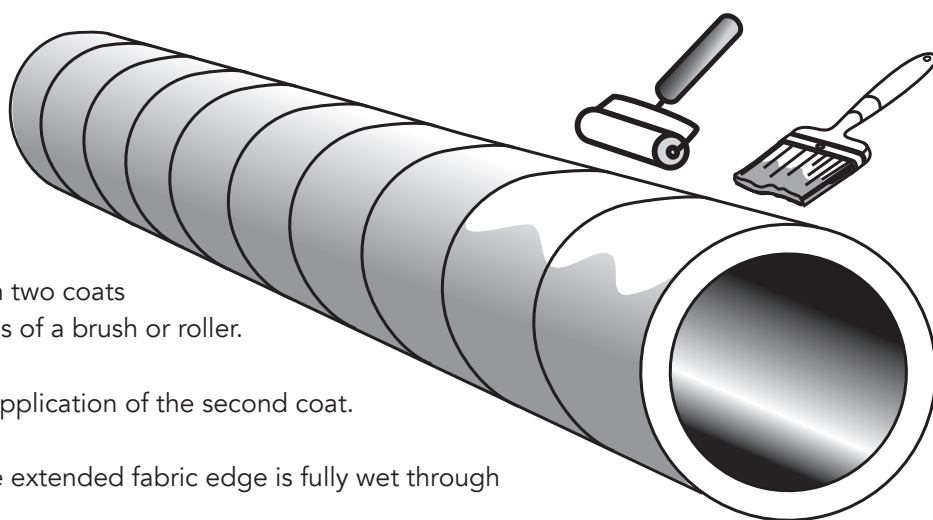
7. APPLICATION OF TOPCOAT - DENSO ACRYLIC TOPCOAT

Fig 10.

The Denso Ultraseal Tape (or Denso Ultraseal RT) is overcoated with two coats of the Denso Acrylic Topcoat by means of a brush or roller.

Allow the first coat to dry before the application of the second coat.

If using Denso Ultraseal RT, ensure the extended fabric edge is fully wet through with Denso Acrylic Topcoat.

Apply the two coats at the coverage of 3m² per litre (see Fig 10).

8. STORAGE

- Store products the correct way up in their original packaging on suitable racking and out of direct sunlight in a dry, cool and well ventilated environment.
- Store away from heat and flames.

9. WASTE DISPOSAL

Please minimise or avoid waste wherever possible. Please do not discard waste material, including packaging, in the surrounding environment. Follow all relevant legislation for disposal.

IMPORTANT:

Winn & Coales (Denso) Ltd pursue a policy to develop and continually improve all of our products and therefore information given in these instructions for use is intended as a general guide and does not constitute a warranty, specification or risk assessment. Instructions for use are intended to provide sufficiently detailed information to achieve successful installation in normal circumstances. These guidelines may not cover all circumstances; however, our sales personnel are committed to assisting the user in establishing the suitability of the product for its intended purpose and additional specific information, advice and training (including Safety Data Sheets) is available. It is strongly recommended that installation is conducted with due regard to Health and Safety using a safe system of work, including risk assessments and method statements, in accordance with relevant local statutes and regulations. Equipment used for installation must be suitable for the intended use, maintained in a safe condition, inspected for signs of deterioration, and used by competent personnel. Any conflict between these guidelines and the specific project specifications must be resolved by the user before work commences. All rights reserved.